Step Motor Wiring Diagram





• Note: As with all two phase step motors, you can change the nominal direction of rotation of the motor by changing the polarity in one phase, e.g. swapping the connections made to B+ and B-.

